

How to change the IP Address of your HDx2 using the front panel

LCD Panel Display	Instructions
HDx2 Ready	Press and hold <ENT> for 2 sec
Quick Logical Drive Install ..	Press down arrow 6 times
View and Edit Config Parm's ..	Press <ENT>
Communication Parameters ..	Press <ENT>
RS-232 Port Configuration ..	Press down arrow once
LAN IP Configuration ..	Press <ENT>
LO[LAN]MA 00:00:00:00:00	Press <ENT>
LO[LAN]IP 192.168.1.129	Press <ENT>
View Statistics ..	Press down arrow once
Setup IP Address ..	Press <ENT>
IP Addr: 192.168.1.129	Press <ENT>
Input Addr: _	{ Use Up/Down to select digits, (0 1 2 3 4 5 6 7 8 9 . R[ARP] D[HCP]) <ENT> to move to next character. Press and hold <ENT> for 2 sec to commit
IP Addr: 123.123.123.123	
Set/Change IP Addr ?	{ (Down arrow to view/change Subnet or Gateway) Press and hold <ENT> for 2 sec Press and hold <ENT> for 2 sec
Change Setting Do Reset Ctrl ?	{ *Make sure all connected host computers are off* Press and hold <ENT> for 2 sec