

How to change the IP Address of your HDX4 using the front panel

LCD Panel Display	Instructions
HDX4 Ready	Press and hold <ENT> for 2 sec
View and Edit Logical Drives..	Press down arrow 5 times
View and Edit Config Parm's ..	Press <ENT>
Communication Parameters ..	Press <ENT>
RS-232 Port Configuration ..	Press down arrow once
LAN IP Configuration ..	Press <ENT>
XX[LAN]MA 00:00:00:00:00	Press down arrow until L0 is selected
L0[LAN]MA 00:00:00:00:00	Press <ENT>
L0[LAN]IP 192.168.1.129	Press <ENT>
View Statistics ..	Press down arrow once
View & Setup IP Address ..	Press <ENT>
IP Addr: Static	Press <ENT>
Input Addr: _	{ Use Up/Down to select digits, (0 1 2 3 4 5 6 7 8 9 . R[ARP] D[HCP]) <ENT> to move to next character. Press and hold <ENT> for 2 sec to commit
IP Addr: 123.123.123.123	
Set/Change IP Addr ?	{ (Down arrow to view/change Subnet or Gateway) Press and hold <ENT> for 2 sec Press and hold <ENT> for 2 sec (Unit will Beep)
L0[LAN]IP 123.123.123.123	Press <ESC> until you return to the "Ready" Screen