



RDXRPN100

Installation Instructions

The following processes must be done before using your RDXRPN100. Failure to comply with these processes may void your warranty and make the RDXRPN100 inoperable. Reference the hardware maintenance manual for specific procedural processes.

DO NOT POWER UP THE RDXRPN100 UNTIL STEPS 1, 2 AND 3 ARE DONE!!

1. Remove packaging

Referring to Section 1 in the Manual, carefully remove the unit from the packing material and set aside all the accessory components. Using the key, open the unit's door and carefully remove the cardboard insert. Open the insert and remove the print cartridges and media bins. **Retain the cardboard insert with the packing materials so it may be reused in the event the unit needs to be transported.**

2. Install ink cartridges

With the cardboard removed, reference Section 1 of the manual and install the ink cartridges; color on the right, black on the left. NOTE: be careful not to touch the copper colored face of the cartridge.

3. Install the cabling

Reference the illustrations and cabling in Section 1 of the manual to install the cables needed to operate the RDXRPN100. The upper ESATA Card connection, marked #1, should be connected with cable #1 to the left ESATA port of the Robotic unit, marked Port 1; the lower ESATA Card connection marked #2 should be connected with cable #2 to the right ESATA port of the Robotic unit, marked Port 2. Connect the USB cable from any USB port to the Robotic's USB power connection. Connect the AC Power cables, one to the lower unit and one to the upper Duplicator unit. Connect the provided Ethernet cable between the unit's Ethernet port and the users' Ethernet wall jack.

4. Applying power

The power on sequence is very important! First turn on the AC switch on the rear of the upper Robotic unit. The library will start going through internal routines to prepare the robotics for operation. **Wait 60 Seconds.** Then turn on the AC switch on the rear of the lower unit and press the power initialize toggle button just above the fan on the rear of the lower unit. The LCD panel will illuminate and the unit will go through a setup routine.

5. Finish setup

With the unit powered up and ready, refer to section 2 of the manual to load the media carrier bins and blank media. Open the front door and wait for the Robotic Disk Transporter to center between the media bin areas. Insert the media bins in the left and right areas, twisting them so they align into place. Place blank media in each bin, keeping the same type of media in the same bin, then close and lock the door. Reference Section 2 of the manual for final networking configuration and setup.

Your RDXRPN100 is ready for operation. Rorke Technical Support is available to answer questions or help with these installation instructions. Contact information is below.

ReadMe



www.rorke.com

Rorke Data, Inc.
A Subsidiary of Bell Micro products
7626 Golden Triangle Drive
Eden Prairie, MN 55344

Toll Free 1.800.328.8147
Phone 1.952.829.0300
Fax 1.952.829.0988